


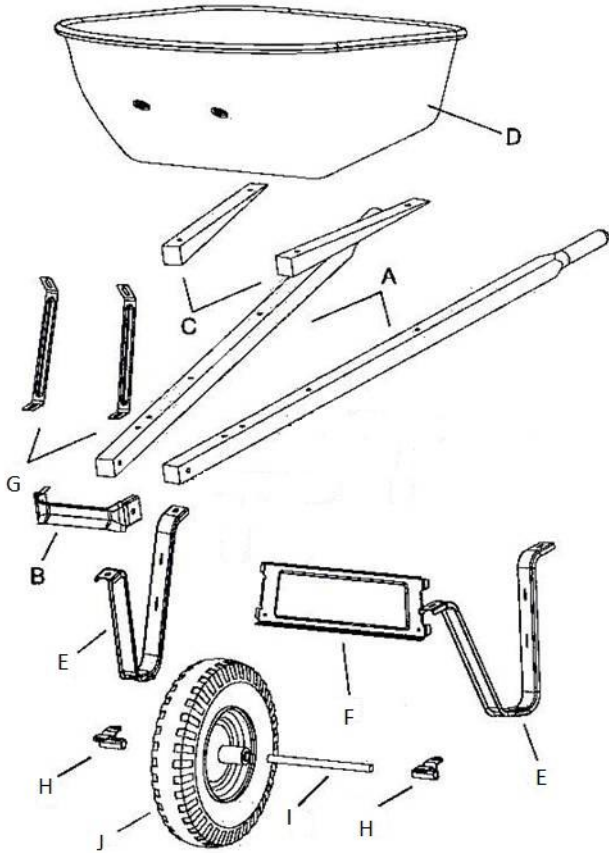


PARTS LISTING


ITEM #'s

WB 6301/6302/6400/6401/6402




Tools Required


 Screwdriver


 1/2" or 13 mm or Adjustable Wrench

Item	Description	Qty
A	Handles	2
B	Noseguard	1
C	Wedges	2
D	Tray	1
E	Legs	2
F	Leg Brace	1
G	Tray Braces	2
H	Axle Brackets	2
I	Axle	1
J	Wheel	1
K	Spacers	2

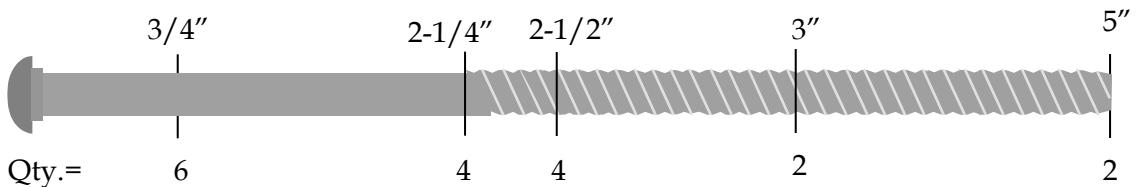

Note: Do not tighten nuts until you have completed assembly of all parts (except where mentioned in directions).



ASSEMBLY

Step 1: Attach Tray (D) to Wedges (C) to Handles (A) through Legs (E) using the two 5" Bolts in front and the two 3" Bolts in back of tray.

Step 2: Attach Noseguard (B) to Handles (A) using the four 2-1/4" Bolts - Note: Tighten these four completely.

Step 3: Attach Leg Brace (F) to back of Legs (E) using four 3/4" Bolts.


Step 4: Attach Axle Bracket (H) to Handles (A) and Tray Braces (G) on one side only using two 2-1/2" Bolts.

Step 5: Place Axle (I) through Wheel (J) and Spacers (K) on each side of wheel. Insert Axle into bracket on side done in Step 4.

Step 6: Repeat Step 4 to opposite side

Step 7: Attach Tray Braces (G) to Tray (D) top using two 3/4" Bolts.

Step 8: Tighten all Bolts.

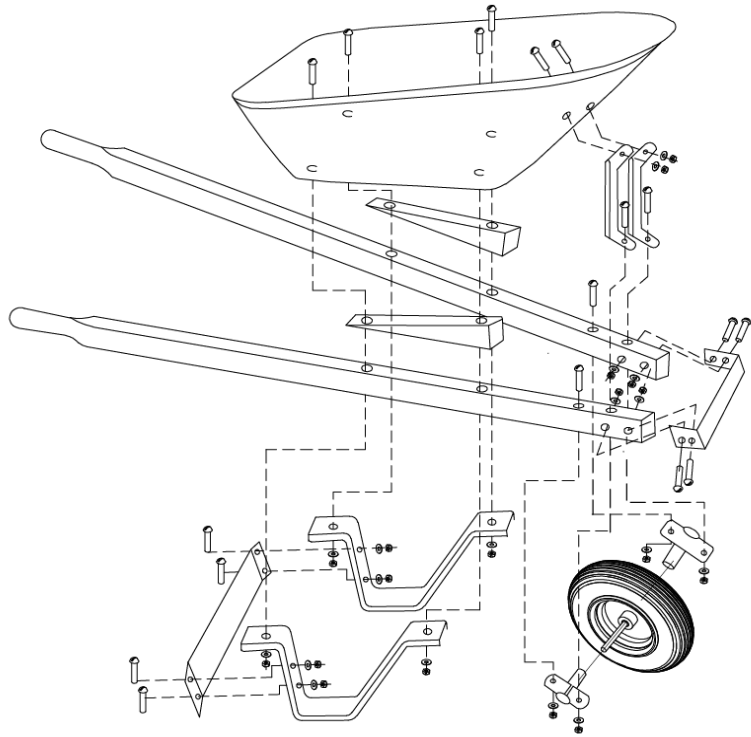

The Master Gardner Company

5770 N. Blackstock Rd. Spartanburg, SC 29303

Toll Free (800) 746-4664

www.mastergardner.com