


MASTER GARDNER WEED BLOCK DISPLAY

ASSEMBLY INSTRUCTIONS:

1. SLIDE FRAME TUBES OVER TUBE INSERTS ON LEFT AND RIGHT FRAME WELDMENTS.

NOTE: ONE FRAME TUBE HAS HOOKS FOR THE GRAPHIC TO HANG ON. SEE PICTURE FOR ORIENTATION.


NOTE: SEE PICTURE FOR SHELF HOOK WIRE ORIENTATION ON LEFT AND RIGHT FRAME WELDMENTS.

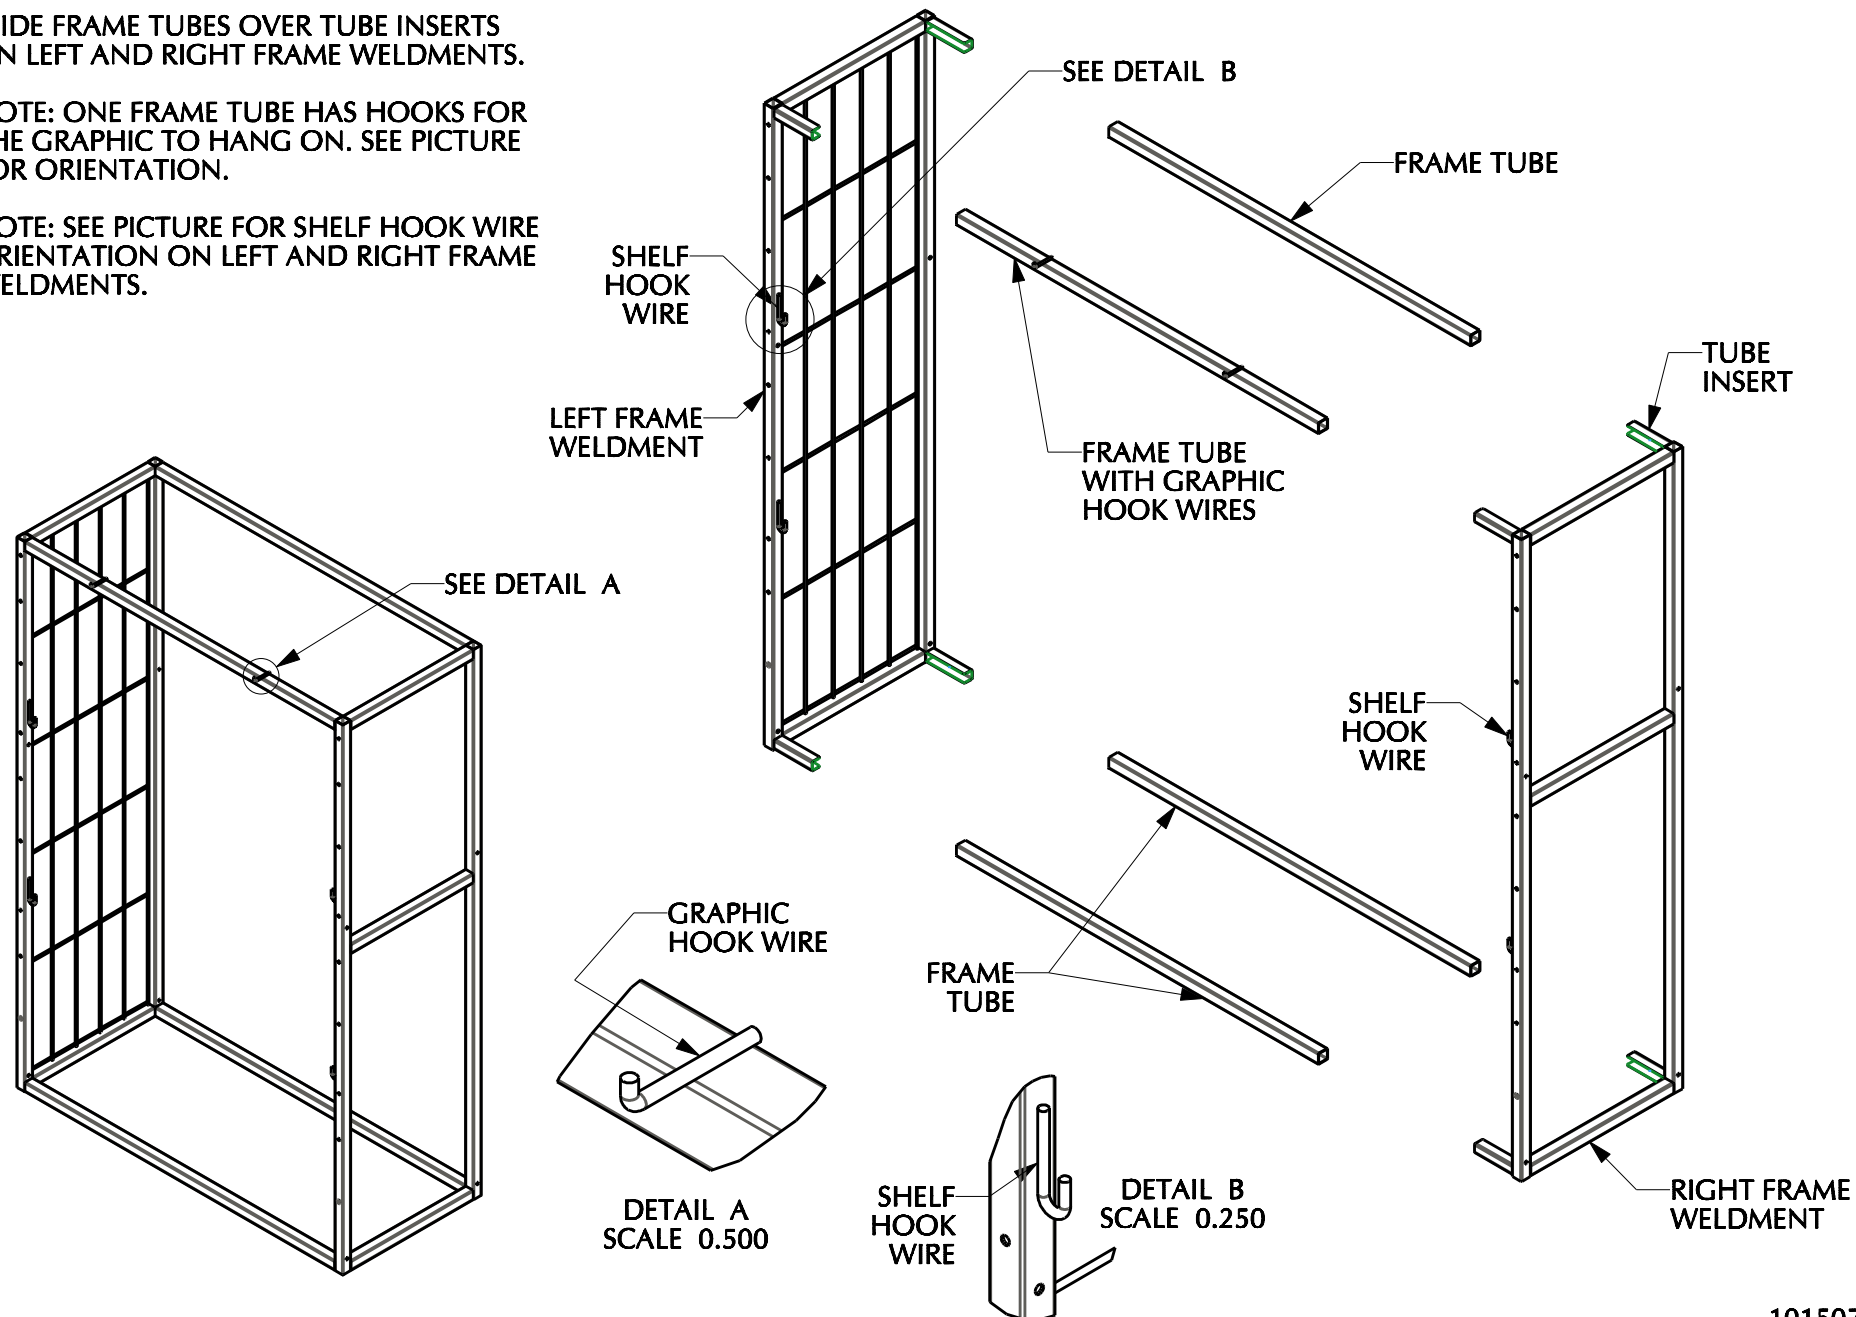

MASTER GARDNER WEED BLOCK DISPLAY


ASSEMBLY INSTRUCTIONS CONT'D:

2. ATTACH FRONT AND REAR GRIDS USING 1/4-20 X .5" SCREWS PROVIDED. REAR GRIDS ATTACH STARTING ON THE TOP HOLE AND GO ALL THE WAY TO THE BOTTOM. FRONT GRIDS START ONE HOLE DOWN FROM THE TOP AND SKIP ONE HOLE BETWEEN EACH GRID. USE DIMENSIONS BELOW TO CHECK FRONT GRID SPACING. PEGHOOK WIRES ON FRONT GRIDS ARE ORIENTED TO TOP AS SHOWN IN DETAIL C.

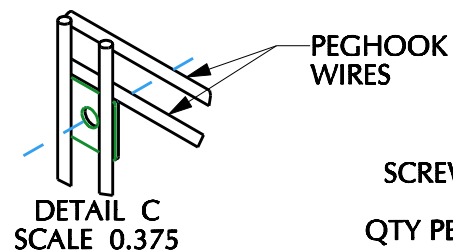


SCREW, PHMSPH
1/4-20 X .5"
QTY PER UNIT - 28

SEE DETAIL C

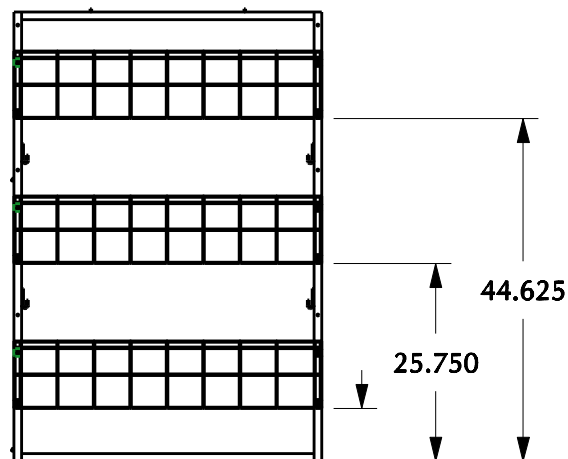

SCALE 0.040
REAR GRIDS
HIDDEN IN THIS
VIEW FOR CLARITY

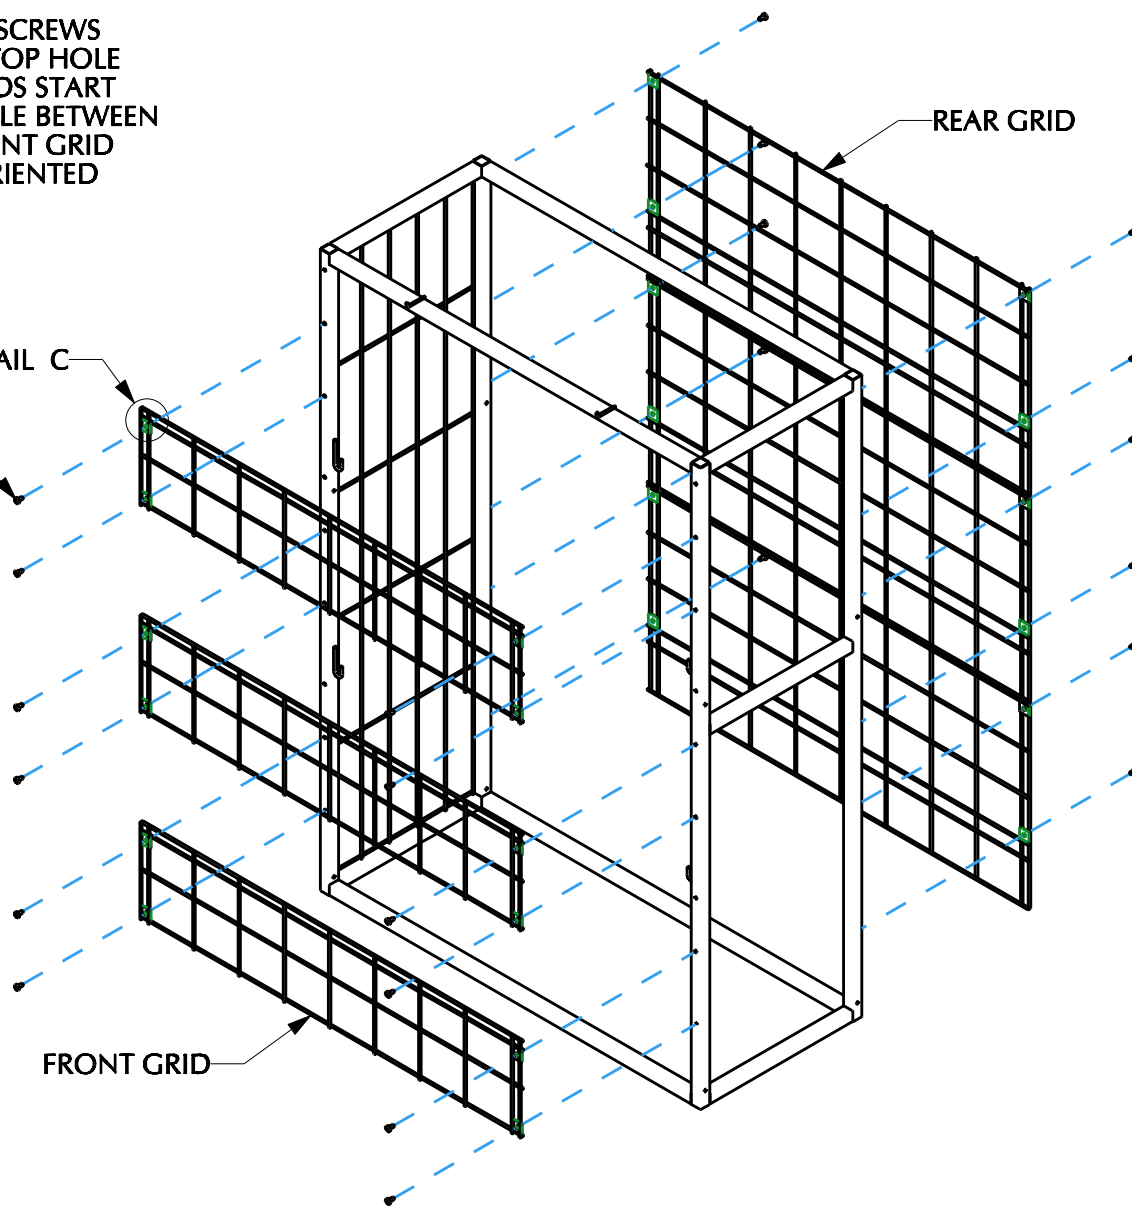

MASTER GARDNER WEED BLOCK DISPLAY

ASSEMBLY INSTRUCTIONS CONT'D:

3. ATTACH SIDE BASKET USING FOUR 1/4-20 X .5" SCREWS PROVIDED.

4. INSTALL SHELVES BY HOOKING SHELF LOOP WIRES AROUND SHELF WIRE ON REAR GRIDS AND RESTING FRONT OF SHELVES ON HOOK WIRES ON FRAME.

NOTE: THERE IS ONE SET OF DOUBLE WIRES ON EACH REAR GRID (SEE DETAIL E). THE SHELVES HANG ON THE UPPER WIRE.

5. ALIGN BRACKETS ON SIDE GRID WITH TUBES ON RIGHT FRAME WELDMENT AND HANG SO THAT ALL FIVE BRACKETS ARE ENGAGING THE FRAME TUBES.

6. HANG GRAPHIC ON WIRES ON UPPER FRAME TUBE.

7. INSTALL PEGHOOKS AT DESIRED LOCATION ON THE SET OF DOUBLE WIRES ON THE FRONT GRIDS. SEE DETAIL F.

SCREW, PHMSPH
1/4-20 X .5"

GRAPHIC

SEE DETAIL F

FRAME

SEE DETAIL E

SHELF
WIRE

SIDE
BASKET

SEE
DETAIL
D

SHELVES

SHELF
LOOP
WIRE

DETAIL D
SCALE 0.500

SIDE
GRID

SHELF
WIRE

DETAIL E
SCALE 0.250

PEGHOOK

DETAIL F
SCALE 0.250

